 
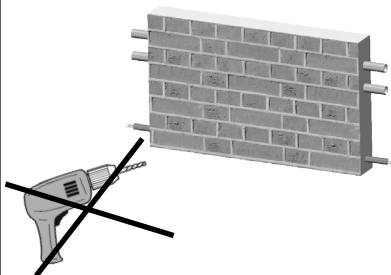 







40026517

- DE Montageanleitung
- ES Instrucciones de montaje
- FR Instructions de montage
- GB Assembly Instructions
- IT Istruzione di montaggio
- NL Montagehandleiding
- PL Instrukcja montażu








Instructions de montage originales 05/03/26
Original mounting instruction 03/05/26 PVA















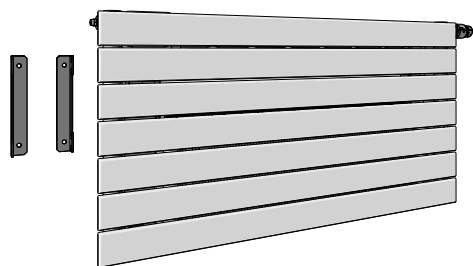


     NICHT BEDECKEN
NO CUBRIR
NE PAS COUVRIR
DO NOT COVER
NON COPRIRE
NIET BEDEKKENNIE
NIE PRZYKRYWAC

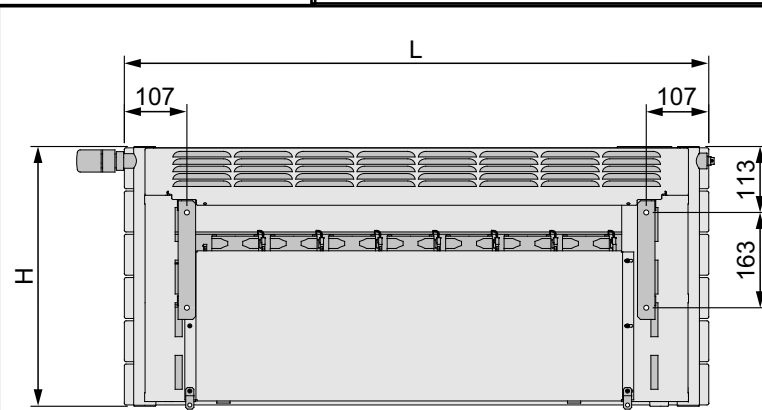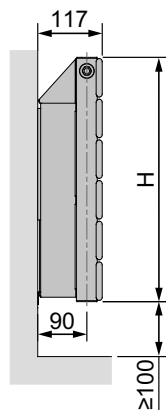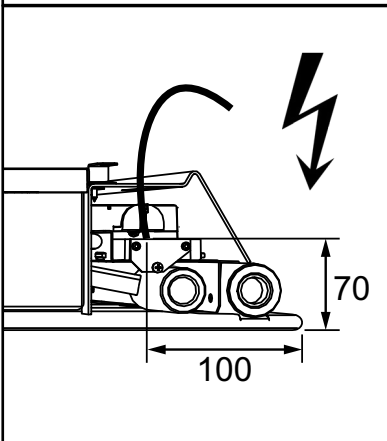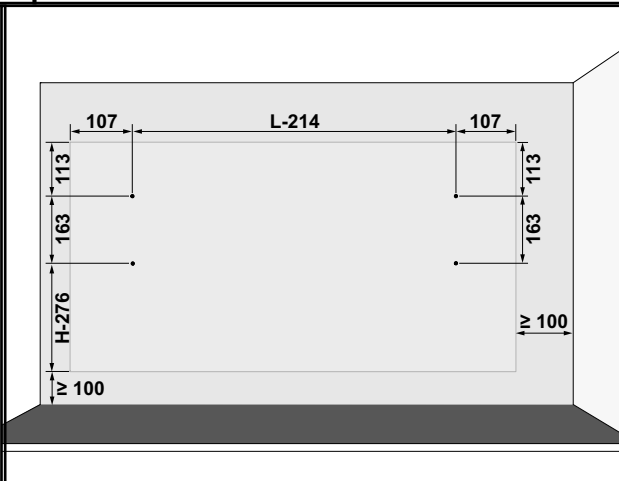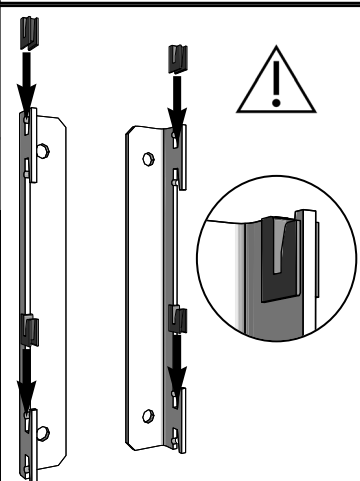

L	H
600	370
700	444
800	518
1000	592
1100	666
1200	740
1400	888
1500	
1800	
2000	

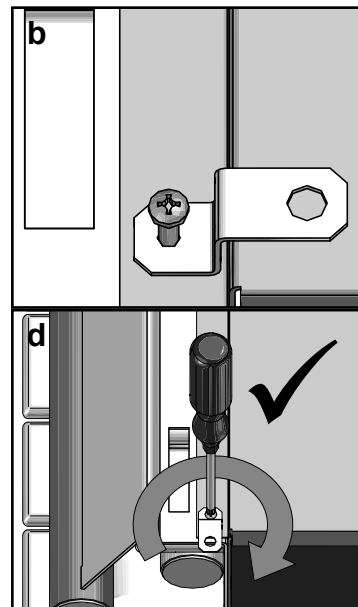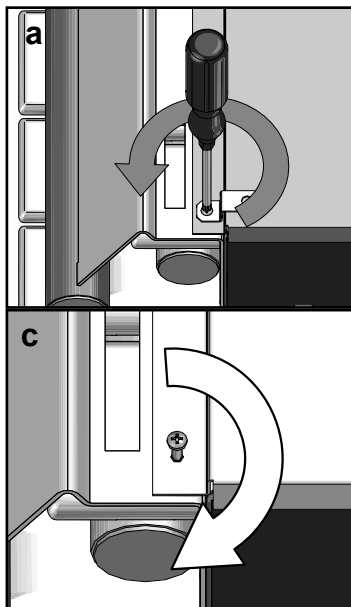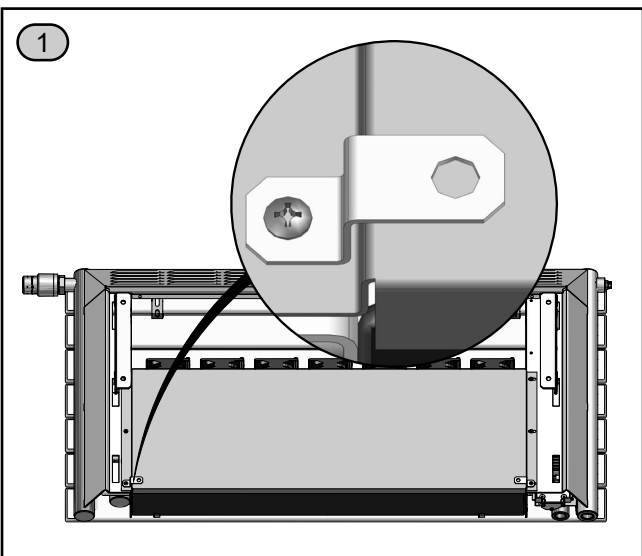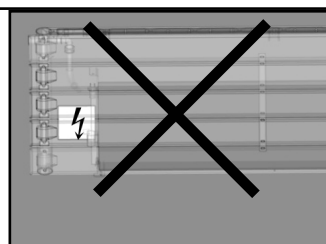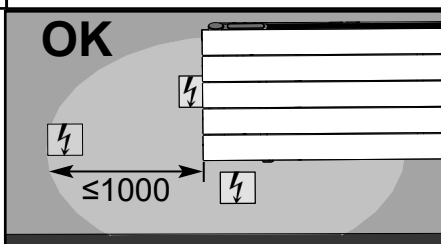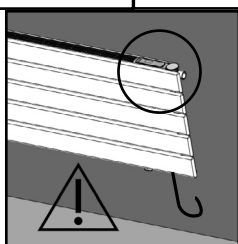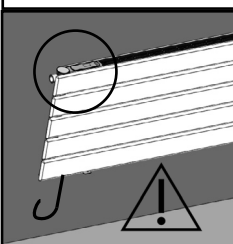       

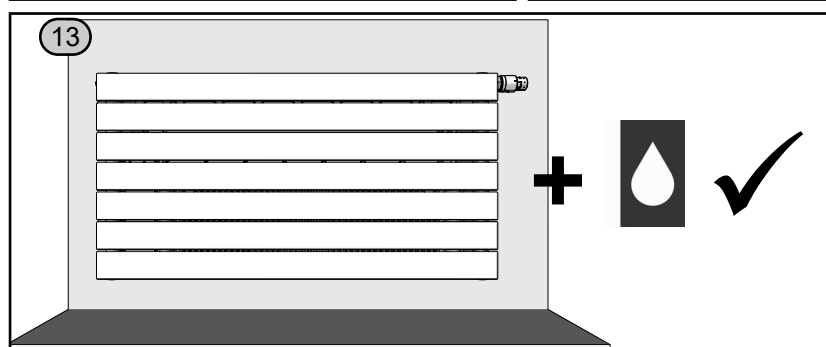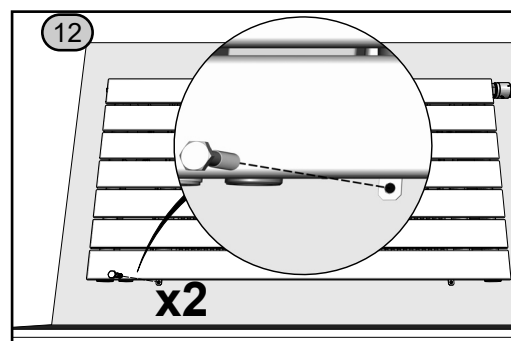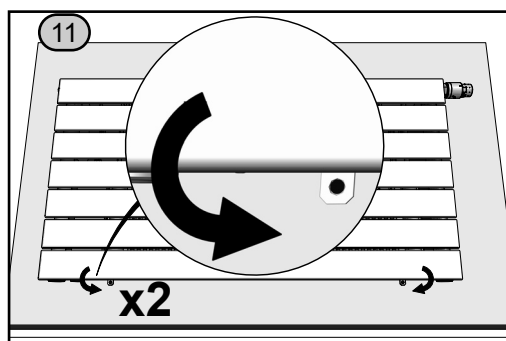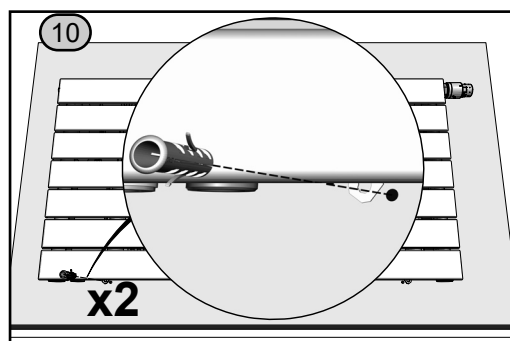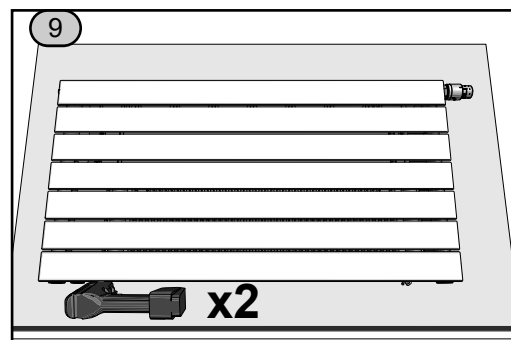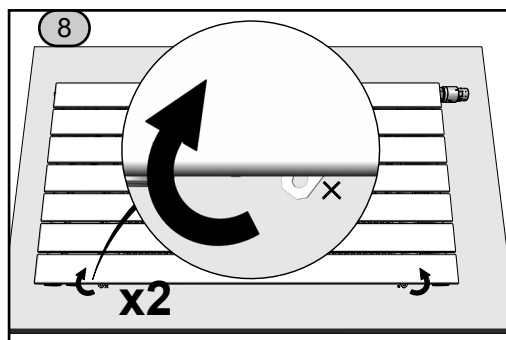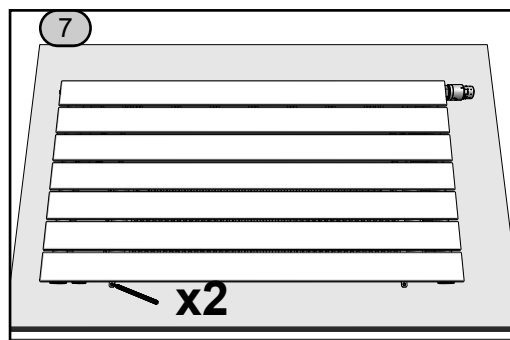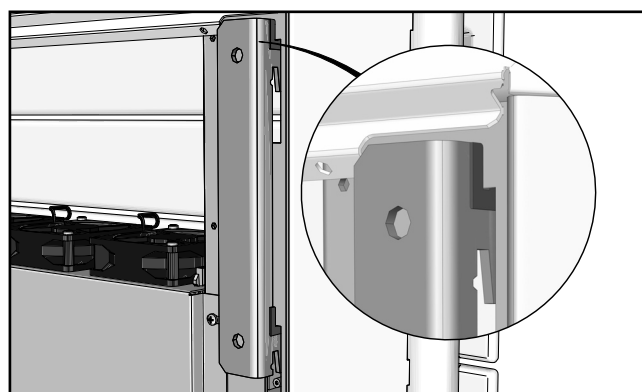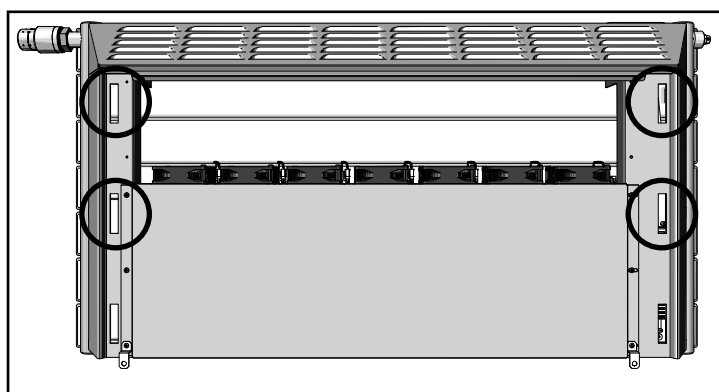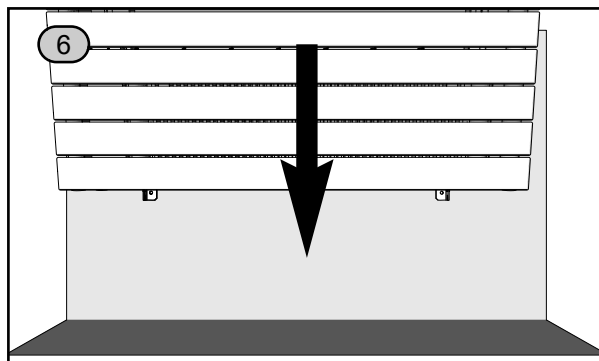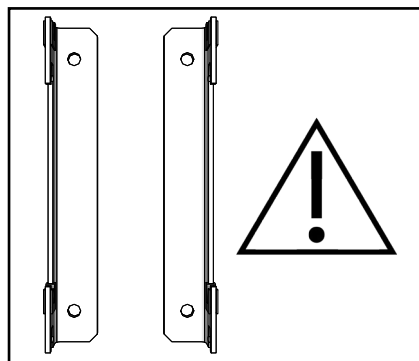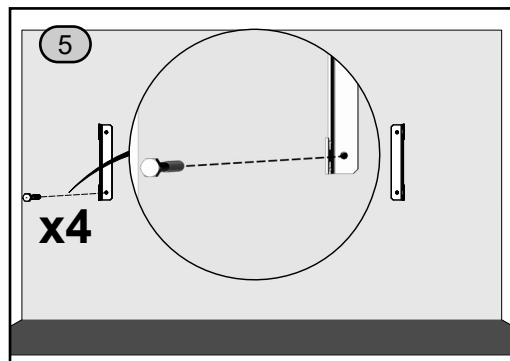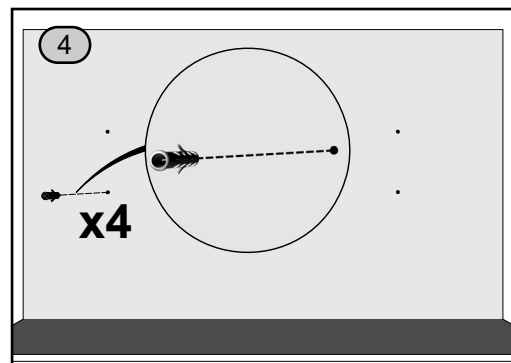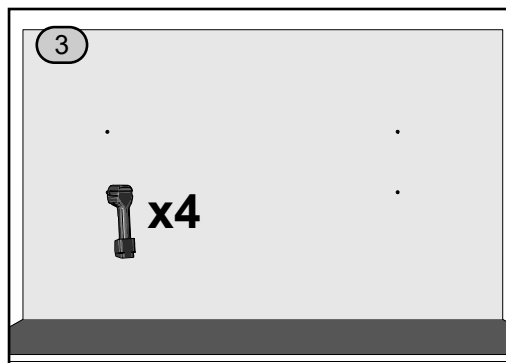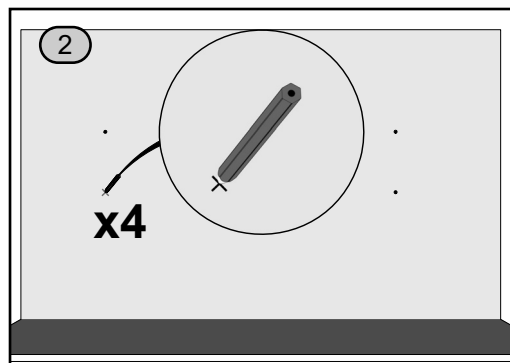               

- **Purgeur à jet orientable:** Serrez modérément le purgeur sur le radiateur pour faire étanchéité à l'aide du joint torique (**15 Nm max**).

- **Swivelling air bleed valve:** Tighten the bleed valve moderately on the radiator with the o-ring to ensure watertightness. (**15 Nm max**).

