




	Atoll TAN			Atoll TAXN Atoll TAXZ			Atoll Prem's			Denim Volga Plus			Volga Prem's Alcantara			Alura Cotona		
	L (mm)	A (mm)	B (mm)	L (mm)	A (mm)	B (mm)	L (mm)	A (mm)	B (mm)	L (mm)	A (mm)	B (mm)	L (mm)	A (mm)	B (mm)	L (mm)	A (mm)	B (mm)
500 W	476	200	75	390	160	45	472	200	100	528	200	100	474	200	67	372	100	50
750 W	476	200	75	470	160	85	472	200	100	528	200	100	474	200	67	472	200	100
1000 W	576	200	125	630	400	165	572	200	150	628	200	150	574	200	117	572	200	150
1250 W	776	400	225	790	400	165	772	400	250	828	400	250	774	400	217	772	400	250
1500 W	876	400	175	950	400	165	872	400	200	928	400	200	874	400	167	872	400	200
2000 W	1176	800	425	1270	800	405	1172	800	450	1228	800	450	1174	800	417	1172	800	450



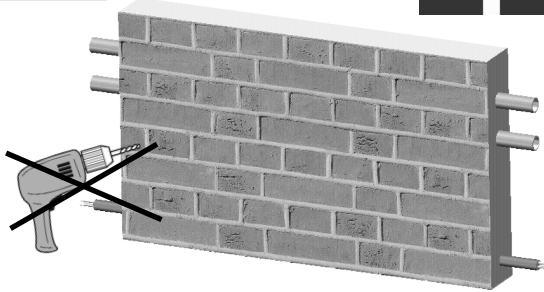

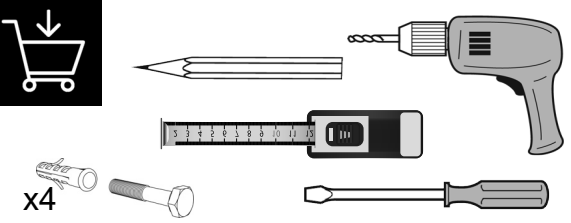



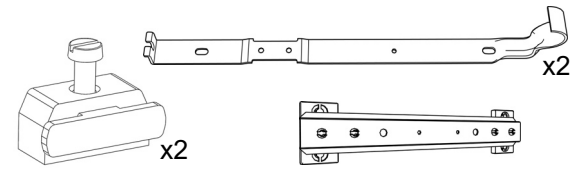Instructions de montage originales

Original mounting instruction

17/04/25


04/17/25

PVA

PVA




40026602

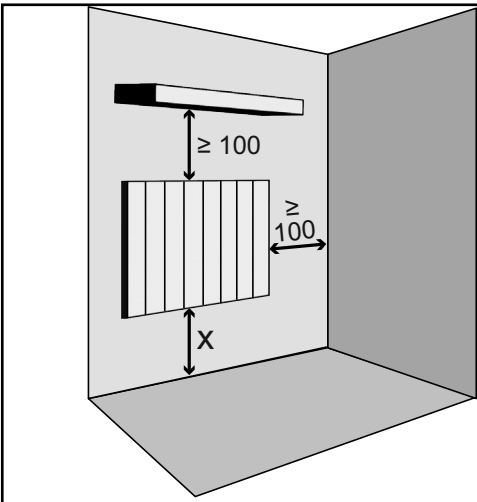

	X
Alcantara	150
Atoll TAN - TAXN - TAXZ	
Denim	
Volga Plus	
Volga Prem's	100
Alura	
Atoll Prem's	
Cotona	

1

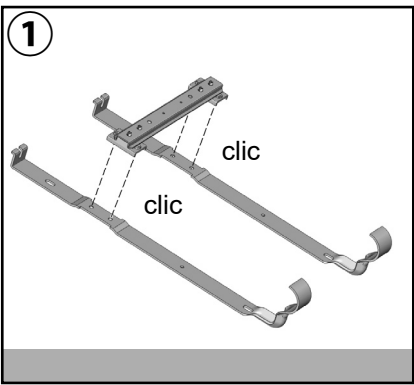

2

